REMOVING AN ELEMENT & LIMITER AND THE HOT SURFACE INDICATOR ASSEMBLY


AWARNING



Electrical Shock Hazard
Disconnect power before servicing.
Replace all parts and panels before operating.


Failure to do so can result in death or electrical shock.

- 1. Unplug range or disconnect power.
- 2. Remove the cooktop glass (see page 4-5 for the procedure).

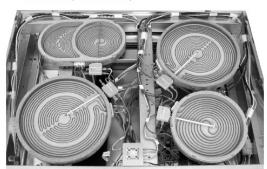

3. To remove an element and limiter:


- a) Disconnect the wires from the limiter and element terminals.
- b) Lift the element and limiter and remove the spring clips from the support rail slots.



Spring Clip In Slot

- c) Disconnect the wire from the limiter terminal.
- d) Remove the two limiter screws from the bottom of the element, and slide the limiter sensor out of the element.

Limiter Screws

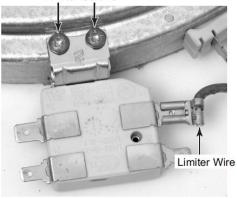

4. To remove the hot surface indicator:

- a) Disconnect the wires from the indicator terminals.
- b) Unsnap the hot surface indicator from the bracket and remove the indicator.

