Wiring Instructions for Dryer Timer

⚠ WARNING

Electrical Shock Hazard


Disconnect power before servicing.

Failure to do so could result in serious injury or death.

NOTE: This instruction sheet provides special wiring instructions for applications when timer 3398190 is used in place of timer 3391658. When replacing 3391658 with the 3398190, follow instructions below carefully. Otherwise, reconnect wire leads in the same manner as they were removed.

Replace 3391658 as follows: (Reference illustration below)

1. Remove blue jumper wire and discard.
2. Connect white lead to single "BU" tab next to "T."
3. Connect brown/yellow lead to "WR" tab.
4. Connect remaining wire leads in the same manner as they were removed.

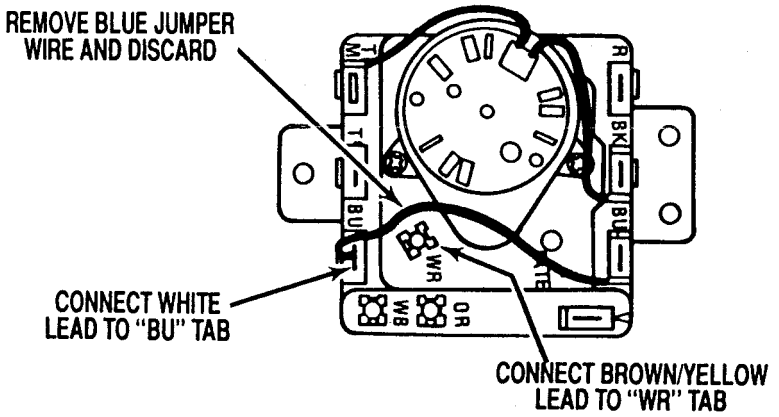

©Whpl. Corporation 1993
(All Rights Reserved)