



⚠ WARNING

Electrical Shock Hazard

Disconnect power before servicing.

Replace all parts and panels before operating.

Failure to do so can result in death or electrical shock.

DIAGNOSTICS

Before servicing, perform the following checks:

- The most common cause for control failure is corrosion on connectors. Therefore, disconnecting and reconnecting wires will be necessary throughout test procedures.
- All tests/checks should be made with a VOM or DVM having a sensitivity of 20,000 ohms per volt DC or greater.
- Check all connections before replacing components, looking for broken or loose wires, failed terminals, or wires not pressed into connectors far enough.
- Resistance checks **must** be made with power cord unplugged from outlet, and with wiring harness or connectors **disconnected**.

PROBLEM: Bake Temperature Needs Adjustment

1. Press BAKE pad for 5 seconds. The default temp. 0° or a previously entered offset temperature will show in the Temperature Display.
2. Select which oven is to be adjusted by pressing the UPPER OVEN or LOWER OVEN pad.
3. Press the TEMP pad “up” arrow (⬆) to **increase** the temperature in 10° F or 5° C increments.

Press the TEMP pad “down” arrow (⬇) to **decrease** the temperature in 10° F or 5° C increments.

NOTE: Maximum offset temperature adjustment is $\pm 30^{\circ}$ F or $\pm 15^{\circ}$ C.

4. Press the START pad to save the temp. adjustment.

Fahrenheit (° F) to Celsius (° C) Conversion

The default is Fahrenheit (° F).

1. Press the BROIL pad for 5 seconds. The temperature will be displayed in degrees Celsius indicated by the “C” in the temperature display.
2. To return the display to degrees Fahrenheit press the BROIL pad again for 5 seconds. “F” will show in the temperature display.

IMPORTANT

Electrostatic Discharge (ESD) Sensitive Electronics

ESD problems are present everywhere. ESD may damage or weaken the electronic control assembly. The new control assembly may appear to work well after repair is finished, but failure may occur at a later date due to ESD stress.

- Use an anti-static wrist strap. Connect wrist strap to green ground connection point or unpainted metal in the appliance

-OR-

Touch your finger repeatedly to a green ground connection point or unpainted metal in the appliance.

- Before removing the part from its package, touch the anti-static bag to a green ground connection point or unpainted metal in the appliance.
- Avoid touching electronic parts or terminal contacts; handle electronic control assembly by edges only.
- When repackaging failed electronic control assembly in anti-static bag, observe above instructions.

Programming the Cavity Size

When replacing the electronic control, be sure to program the cavity size:

1. Within 60 seconds of power up, press the following touchpads:
LOWER OFF, UPPER OVEN, BAKE, TEMP DOWN, TIMER OFF, MINUTE DOWN, START, CLOCK, LIGHT.
2. Size is shown in display - “ID 30”.
3. Press CLOCK pad until correct size is displayed.
4. Press CANCEL.
5. Press and hold LOWER OFF pad for 5 seconds to verify programming.

NOTES:

- Always disconnect power before touching internal parts of the oven!
- Upon replacement, immediately return old electronic oven control using the mailing label supplied with each new control.
- For double ovens, the failure code is displayed on the side of the display that corresponds to the oven with faulty part (upper oven = left side of display).

FAILURE/ERROR DISPLAY CODES


| FAULT CODE | ERROR CODE | CODE EXPLANATION | RECOMMENDED REPAIR PROCEDURE |
|------------|--------------------|--|--|
| F0 | | Default F code - no failure | Will only be displayed if user presses and holds "UPPER OFF" key for 5 seconds and there is no pre-existing fault. Press CANCEL to clear display. |
| F1 | All E Codes | Electronic control malfunction | Replace control. |
| F2 | E0 | Key held down too long, or key is shorted | <ol style="list-style-type: none"> 1. Check keypad connector for firm connection. 2. Press CANCEL. If error code returns after 60 sec., replace keypad. 3. Replace control. |
| | E1 | Keypad keytail not connected | |
| | E5 E6 | CANCEL key drive line open | |
| F3 | E0 | Temperature sensor opened | <ol style="list-style-type: none"> 1. Check sensor connection. 2. Measure sensor resistance (1080Ω at 21° C (70° F). Add 2Ω per degree F) 3. If resistance is not valid, replace sensor. 4. If sensor resistance and connections are good, then the oven cavity temperature must have exceeded a safe level. Check for welded-closed relays on the control. |
| | E1 | Temperature sensor shorted | |
| | E2 | Oven temp too high - over 301° C (575° F) in COOK mode | |
| | E3 | Oven temp too high - over 510° C (950° F) in CLEAN mode | |
| F4 | E1 | Meat probe malfunction - shorted | <ol style="list-style-type: none"> 1. Disconnect meat probe and measure probe resistance [78k Ω @ 15.6° C (60° F)];[37k Ω @ 32.2° C (90° F)]. 2. If resistance is not valid replace sensor. 3. Insert probe and check for a firm connection between probe and jack (in oven cavity). 4. Check connection between jack and harness (in rear of oven). |
| F5 | E0 | Door is open, but latch is locked (condition exists when door switch is closed indicating an open door, and latch switch is closed indicating a locked door) | <ol style="list-style-type: none"> 1. Check the latch assembly: latch arm pivot joint, arm/solenoid connection, solenoid spring, and spring washer. 2. Check the Latch Solenoid: <ul style="list-style-type: none"> - Check for firm electrical connections. - Disconnect the two wires from the solenoid and measure the resistance of the solenoid. A small resistance (approx. 175Ω) is normal. If the solenoid is open (∞Ω) or shorted (0Ω), it should be replaced. 3. Check the Latch Switch. Disconnect it and use a continuity tester: <ul style="list-style-type: none"> - Door latched = switch closed, continuity should read 0Ω. - Door unlatched = switch open, continuity should read ∞Ω. 4. Check Door Open/Closed Switch. Disconnect it and use a continuity tester: <ul style="list-style-type: none"> - Door open = switch closed, continuity should read 0Ω. - Door closed = switch open, continuity should read ∞Ω. 5. Check power and element connections. |
| | E1 | Self-clean latch will not lock | |
| | E5 | Self-clean temperature 288° C (550° F) not reached within 45 min. | |
| | E7 | Self-clean latch will not unlock | |

WIRE HARNESS SCHEMATIC

NOTES:

- When replacing the electronic control, be sure to program the cavity size. See "Programming the Cavity Size" on page 1.
- Dots indicate connections or splices.
- Circuit shown in STANDBY/OFF mode with oven door closed.

| | | |
|--------------------------------|-----------------|---------------------|
| GROUND (CHASSIS) | AC DRIVE MOTOR | SOLENOID |
| PLUG WITH FEMALE CONNECTOR | RELAY COIL | ENCLOSED THERMISTOR |
| RECEPTACLE WITH MALE CONNECTOR | RELAY CONTACTS | OPERATED BY DOOR |
| LIGHT | HEATING ELEMENT | THERMAL FUSE/T.O.D. |

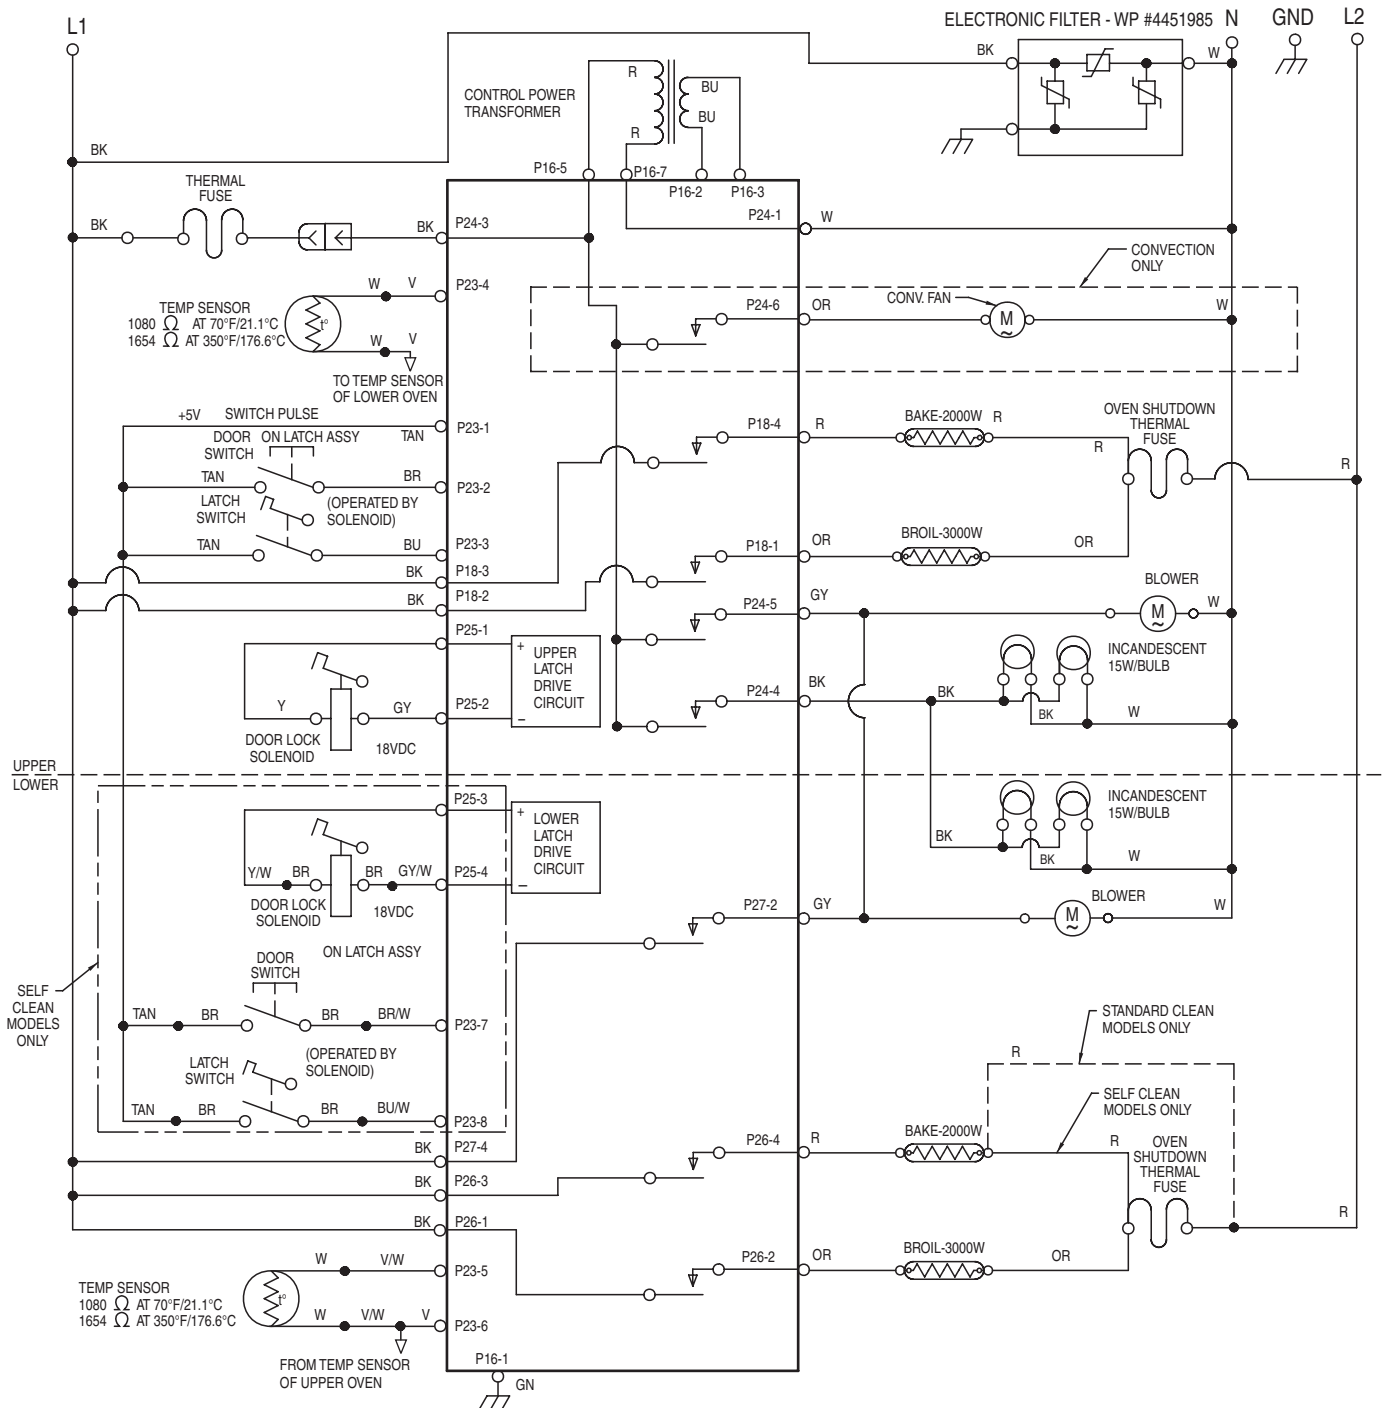


OVEN STRIP CIRCUITS

The following individual circuits are for use in diagnosis.
Before starting diagnosis, check the line voltage and for blown fuses.


NOTES:

- Pin numbers and wire colors shown in parentheses () denote lower oven connections.
- Pins denoted as * see wire harness schematic on page 3 for routing configuration from relays to L1.

BAKE AND PREHEAT-BAKE

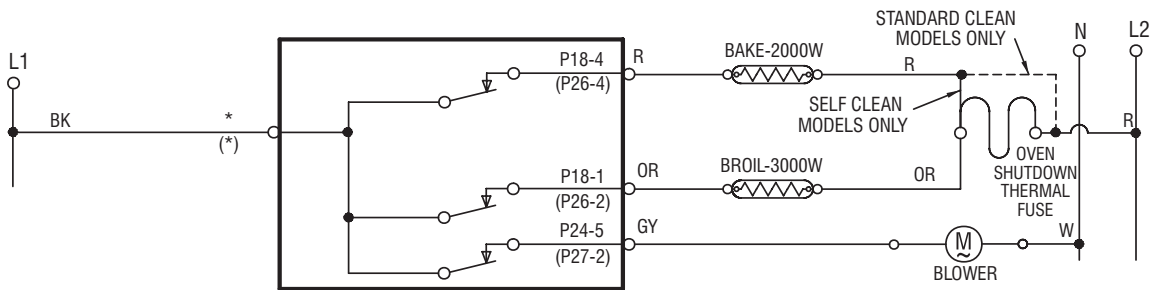


BROIL

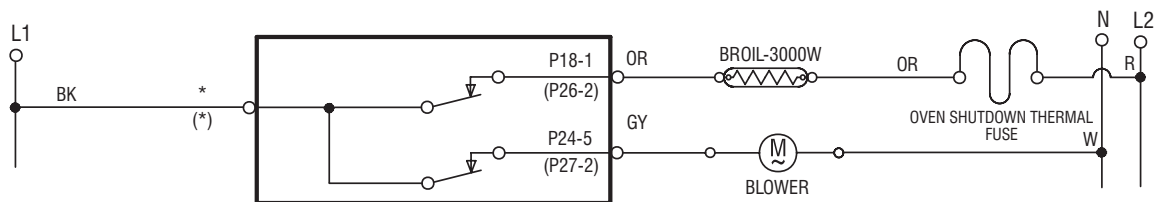


CONVECTION AND PREHEAT-CONVECTION

(CONVECTION MODELS, UPPER OVEN ONLY)

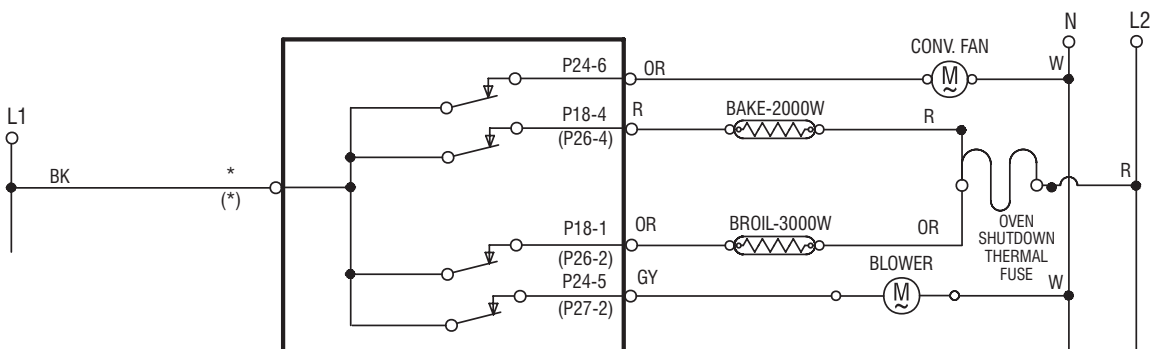


CLEAN AND PREHEAT-CLEAN


(SELF CLEAN MODELS ONLY)

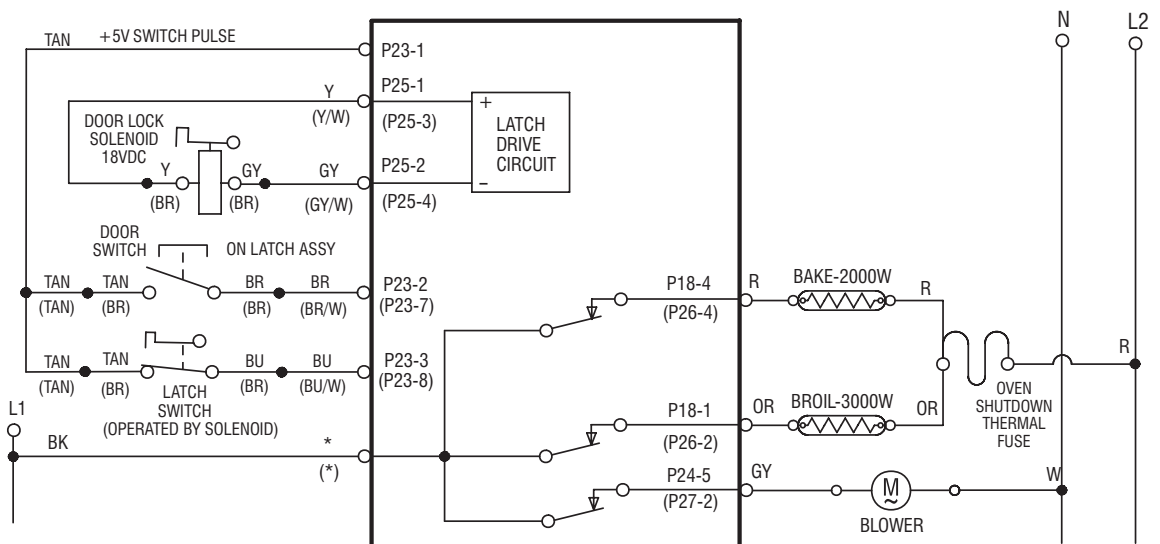

UPPER OVEN COMPONENTS

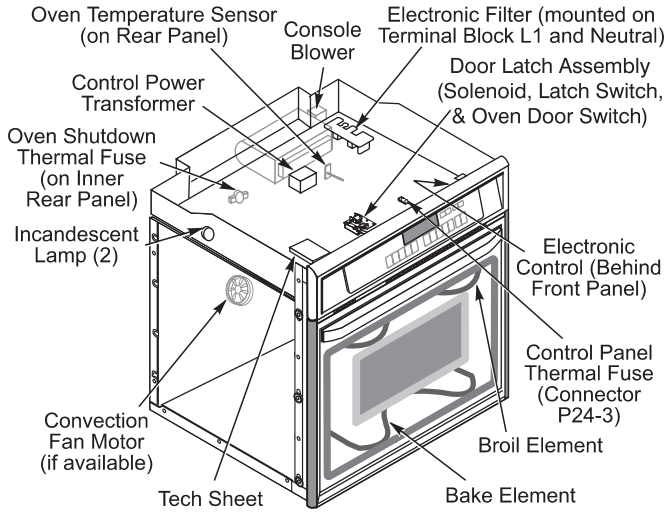

LOWER OVEN COMPONENTS

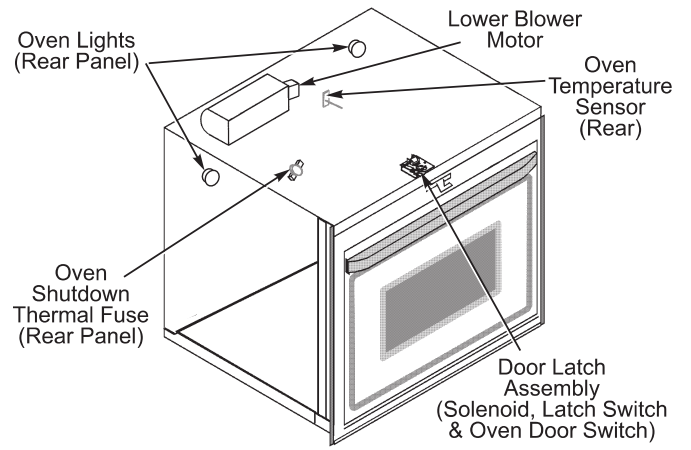

RELAY LOGIC UPPER AND LOWER OVEN


| MODES | RELAYS | BAKE & "B" | BROIL & "BR" | CONV FAN | OV LT | BLOWER |
|----------------|--------|------------|--------------|----------|-------|--------|
| OFF | O | O | O | Ø | Ø | Ø |
| PREHEAT-BAKE | + | + | O | Ø | X | X |
| BAKE 24", 27" | + | + | O | Ø | X | X |
| BAKE 30" | X | + | O | Ø | X | X |
| BROIL 24" | O | + | O | Ø | X | X |
| BROIL 27", 30" | O | X | O | Ø | X | X |
| PREHEAT-CONV | X | + | X | Ø | X | X |
| CONV | + | + | X | Ø | X | X |
| PREHEAT-CLEAN | + | + | O | O | X | X |
| CLEAN | X | + | O | O | X | X |

RELAY LOGIC KEY

- O - OFF
- X - ON
- +- CYCLING
- Ø - ON OR OFF

OVEN SHUTDOWN THERMAL FUSE

The oven shutdown thermal fuse is located at the back of the oven. It will shut down the elements if the temperature at the back of the oven exceeds component limits.



Verify that the oven shutdown thermal fuse is okay.

To replace this thermal fuse, refer to chart at right for correct part number.

| Thermal Fuse Part No. | Opening Temp. ° C | Reclose Temp. ° C | Marking (with Black Letters) |
|-----------------------|---------------------------------|-------------------|------------------------------|
| 4452223 | 130°C ± 5.5° C | -35° C MAX | Pink/Wht Stripe |
| 4451442 | 120° C + 10° C to 120° C - 0° C | | Yellow/Wht Stripe |
| 4450934 | 170° C ± 6.5° C | | Red |
| 4450334 | 135° C ± 6.5° C | | Orange/Wht Stripe |
| 4450250 | 160° C ± 6.5° C | | Blue |
| 4450249 | 150° C ± 6.5° C | | Green/Wht Stripe |

| LOWER OVEN | | | |
|----------------------------|------------------------|---|--|
| COMPONENTS | FRONT/REAR SERVICEABLE | CHECK POINTS | RESULTS |
| Door Switch | Front | P23-7 (BR/W) to P23-1 (TAN) | Door Open = Closed Circuit Door Closed = Open Circuit |
| Door Lock Solenoid | Front | P25-3 (Y/W) to P25-4 (GY/W) | 80 Ω to 100 Ω |
| Oven Temperature Sensor | Front | Sensor P23-5 (V) to P23-6 (GN) | 1080 Ω @ 70°F |
| Console Blower | Rear | P27-2 (GY) to Neutral (W) | 10 Ω to 15 Ω |
| Oven Shutdown Thermal Fuse | Rear | P26-2 (OR) or P26-4 (R) to Red Wire at Terminal Block | Closed Circuit |
| Bake Element | Front | P26-4 (R) to Red Wire at Terminal Block | 25 Ω to 30 Ω |
| Broil Element | Front | P26-2 (OR) to Red Wire at Terminal Block | 45 Ω to 55 Ω |
| Latch Switch | Front | P23-8 (BU/W) to P23-1 (TAN) | Door Unlocked = Open Circuit Door Locked = Closed Circuit |

| UPPER OVEN | | | |
|----------------------------|------------------------|--|--|
| COMPONENTS | FRONT/REAR SERVICEABLE | CHECK POINTS | RESULTS |
| Door Switch | Front | P23-2 (BR) to P23-1 (TAN) | Door Open = Closed Circuit Door Closed = Open Circuit |
| Door Lock Solenoid | Front | P25-1 (Y) to P25-2 (GY) | 80 Ω to 100 Ω |
| Oven Temperature Sensor | Front | Sensor P23-4 (V) to P23-6 (GN) | 1080 Ω @ 70°F |
| Console Blower | Rear | P24-5 (GY) to Neutral (W) | 10 Ω to 15 Ω |
| Oven Shutdown Thermal Fuse | Rear | P18-4 (R) or P18-1 (R) to Red Wire at Terminal Block | Closed Circuit |
| Bake Element | Front | P18-4 (R) to Red Wire at Terminal Block | 25 Ω to 30 Ω |
| Broil Element | Front | P18-1 (OR) to Red Wire at Terminal Block | 45 Ω to 55 Ω |
| Convection Fan Motor | Rear | P24-6 (OR) to Neutral (W) | 8 Ω to 12 Ω |
| Control Panel Thermal Fuse | Front | L1 (BK) to P24-3 (BK) | Closed Circuit |
| Latch Switch | Front | P23-3 (BU) to P23-1 (TAN) | Door Unlocked = Open Circuit Door Locked = Closed Circuit |
| Control Power Transformer | Front | Primary Winding P16-5 (R) to P16-7 (R) Secondary Winding P16-2 (BU) to P16-3 (BU) | 75 Ω to 95 Ω 2 Ω to 4 Ω |

MANUFACTURED UNDER ONE OR MORE OF THE FOLLOWING UNITED STATES PATENTS:

4,102,322 4,364,589 4,467,184

OTHER PATENTS PENDING